 


ortizan

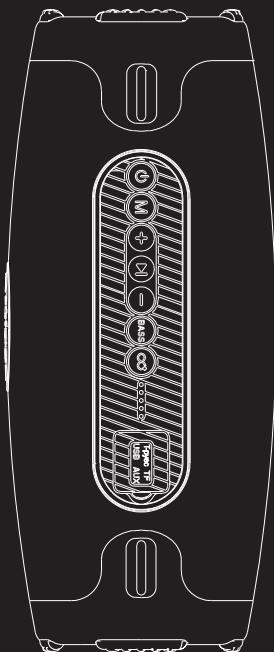

M8 BT Speaker

User Manual

Safety instructions


Please read all instructions before use

1. To avoid disabling the warranty and damaging the product, please do not disassemble the product.
2. The rechargeable battery charging cycles are limited.
3. Battery life and charging cycle owing to the different use and settings.
4. Please do not place the product near the high-temperature heat source.

Package Included

1*M8 BT Speaker 1*User Manual 1*T-pyec line
1*Shoulder Strap 1*Audio Cable

Button And Function

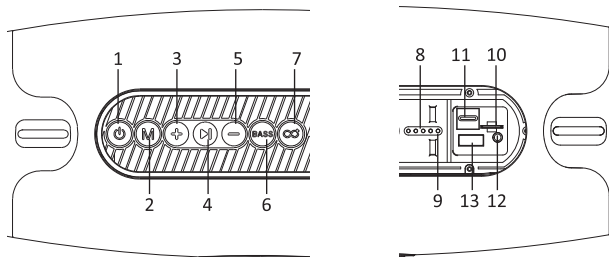

1. Power: Short press to switch light effects. Long press 3s to power on/off
2. Mode: Short press to switch BT/TF/AUX/USB music play mode. Long press to disconnect BT
3. +: Short press to volume up. Long press to choose the next track
4. Pause: In music mode short press to pause
5. -: Short press to volume down. Long press to choose the previous track
6. BASS: Short press to Switch sound effects(Normal/Heavy bass). Long press to clear BT pairing information
7. ECHO: Long press to turn on/off TWS mode
8. Battery level indicator light
9. BT indicator light
10. TF card slot
11. T-pyec port
12. AUX port: Reset button build-in AUX port
13. USB port

Battery

Built-in rechargeable lithium battery

Charging

A white LED light will be on when charging. Four white LED lights will be on when fully charged.

If the product has not been used for more than 7 days, it is suggested that charge for 10 minutes before using the product, then use it after the charge.

Power ON/OFF

Power on: Long press the power button 3s to turn on the speaker, the BT indicator light will be on then you can connect the BT device.

Power off: Long press the power button 3s to turn off the speaker, and the BT indicator light will be off.

Connect The Speaker

Turn on the speaker, and it automatic into BT mode, turn on the BT device to search the "M8", and select the connection, there will have a voice prompt after the connection is successful. One speaker only supports connecting one BT device at the same time. If you need to connect other BT devices, please disconnect the current BT device first.

Disconnect The BT

After the BT connection, long press the "M" button 3s to disconnect the BT.

Reconnect The Speaker

After a speaker is paired with a device that automatically connects to BT, the speaker will automatically pairing after the restart.

If the device without automatically connects to the BT function, the speaker can not automatic pairing after the restart. When the BT can not connect, long press the "M" button 3s will automatically connect the last disconnected BT devices.

RGB Light

Short press the power button to switch the light effects.

Play Mode

Short press the "M" button to switch BT/TF/AUX/USB play mode.

Adjust The Volume And Switch Music

Volume up: Short press the "+" button.

Volume down: Short press the "-" button.

Next track: Long press the "+" button.

Previous track: Long press the "-" button.

Heavy Bass Mode

The speaker defaults to Normal mode, short press the “BASS” button to switch to Heavy Bass mode. Long press the “BASS” button to clear BT pairing information, after a beep sounds the speaker will restore default settings and auto power off.

SD Card Mode

Turn on the speaker, insert the SD card to play music.

AUX Mode

Turn on the speaker, using a 3.5mm audio cable to connect the speaker to your BT device, then the speaker plays music via the audio cable.

Pause Function

Press the “>|” button to start /pause music.

Reset Function

Using a long fine needle long press the reset button 6s in the AUX port, the speaker will have reset tone and auto power off.

Auto Power Off

The speaker will auto power off after 20 minutes if it does not pair with any BT device or does not play any sound after pairing. When in low battery, the speaker will auto power off as well.

T-W-S Mode

1. Turn on the two speakers (disconnect the speaker from the other BT device).
2. Short press the “ECHO” button 2s on one of the speakers, and it will have a voice prompt after the pairing is successful. After the pairing is successful, the blue indicator light will flash on the master speaker, and the slave speaker's blue indicator will be off.
3. Release the “ECHO” button, T-W-S connection may take a few seconds.
4. Turn on the BT device, and select the “M8” for BT pairing(Two speakers display one BT name)

Disconnect T-W-S

Long press the "ECHO" button 2s on one of the speakers.

Specification

Model: Ortizan M8

Input: 9V2A

Waterproof level: IPX7

BT: V5.3

Built-in rechargeable battery: 14400 mah

Format: MP3, WAV, WMA

Note:

1. Notice: If the battery is scrap, please use the same type of replacement. Otherwise, maybe an explosion.
2. Lithium batteries may not be exposed to places such as flammable or overheating.

Fault and maintenance:

1. BT connection failure:

Solution:

- (1) Please make sure the white LED light is on. If the light is off, please turn on the speaker. If the light is still off, please recharge the speaker.
- (2) If there are a lot of BT devices around, please turn off the other BT devices. It is difficult to search BT if there are a lot of BT device.
- (3) Restart the speaker to re-search BT.

2. Music player's voice interrupted


Solution:

- (1) Check the distance between the music player and the speaker is not too far.
- (2) Ensure that there is no obstacle between the music player and the speaker.
- (3) Check whether the music player and the speaker are in a state of low power consumption.

3. Unknown problems.

Solution:

Reset the speaker.

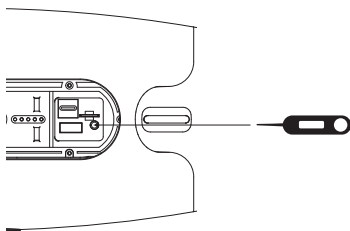

Before use

This product design fully pay attention to safety. In order to ensure safe operation, please follow the following rules:

1. Please keep the product in a safe and stable position to avoid falling, which may cause damage or personal injury.
2. Please do not drop, disassembly, open, extrusion, bending, piercing, burning the product.
3. Please keep the product away from any heat source.(such as radiators, heating equipment, stoves, or other heat source)
4. If there have any damage, please contact professional maintenance personnel for repair.
5. Please unplug the power before use dry cloth to wipe the product.
6. For your health ,please adjust the volume to an appropriate level

Warning:

Do not alter or modify the product without permission.

Troubleshooting Guide

Can not power on
Please recharge the speaker.

No Sound

1. Adjust the volume.
2. Please ensure that the BT device is within BT transmission range.
3. Please ensure there are no obstacles blocking/interfering with the BT signal.
4. Please ensure the speaker is connected to the BT device.

Poor sound quality

Keep the BT device closer to the speaker, or try to clear obstacles between the BT device and the speaker.

Can' t connect to the BT device

Disconnect the speaker from other BT devices and re-connect(
Disconnect from the BT device or long press the "M" button).

In order to avoid damage to the product performance, please charge it at least once every three months.