



B5

Wireless headphones for music


User manual

USER  
MANUAL

## Headphone LED Indicator Instructions


Power On	Blue LED lights up, enters pairing mode
Pairing Mode	Red/Blue LED alternately flashes
Standby Mode	Blue LED lights up
Low Battery State	Red LED flashes once every 2 seconds
Charging Mode	Red LED lights up during charging, extinguishes when fully charged

## Introduction to the appearance and functions of the headphones

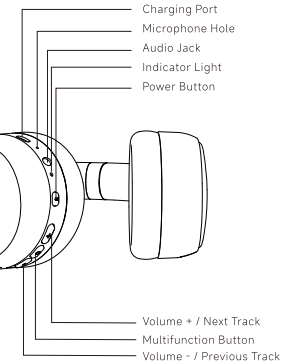


## Basic Headphone Button Operations

### BT Pairing

Power On: Press and hold the power button  for 3 seconds. The headphone indicator light will stay blue for 2 seconds after booting up, and the voice prompt will say "Power on".

Pairing Status: The indicator light flashes alternately red/blue, and after successful pairing, it will announce "Connected", with the blue light staying on.

Turning Off the Headphones: Press and hold the power button  for 3 seconds. The red light will stay on for 2 seconds and then turn off, with the voice prompt saying "Power off".

### First-time Wireless Connection with the Headphones

After powering on the headphones, the Wireless indicator light will flash alternately red/blue. Turn on the Wireless function of your device, search for the headphone Wireless device name: "picun B5", and click on "picun B5" to connect. Upon successful connection, the blue light will stay on, and during music playback, the blue light will flash slowly.

### Subsequent Uses

If your device already has pairing information for the headphones, they will automatically reconnect after powering on, completing the pairing and connecting to the device.

### Connecting to Other Devices

To connect to other devices, first delete pairing information from paired devices or simultaneously press and hold the volume up and volume down buttons for 3 seconds when not in call mode. Then enter pairing mode to be connectable from other phones. Then follow the steps for "Wireless Pairing".

## Auto Shutdown and Auto Reconnect on Out-of-Range

When the headphones exceed the effective range, they will disconnect. If you return to the Wireless range within 5 minutes, the headphones will automatically reconnect. If you do not return to the valid Wireless connection range within 5 minutes, the headphones will automatically shut down.








### Volume Adjustment

Short press the "+" button to increase volume.  
Short press the "-" button to decrease volume.

### Song Selection

Long press the "+" button to skip to the previous track.  
Long press the "-" button to skip to the next track.

### Play/Pause/Answer call

Press the power button  "1 click" while playing music to pause.  
Press the power button  "1 click" while paused to play music.  
Press the power button  "1 click" when there is an incoming call to answer the call.  
Press the power button  "1 click" during a call to end the current call.  
Press and hold the power button  when there is an incoming call to reject the call.  
Double-click the power button  when connected to headphone status to redial the last number.  
Press and hold for voice assistant, press the multifunction button  for 2 seconds.

### Battery status

When headphones are connected to an iOS device, the current headphone battery status is displayed in the top right corner of the iOS device screen.

## Headphone charging

When the battery charge is low, please charge it for about 3 hours using a USB charging cable. The headphones cannot be used during charging. During charging, the red indicator light stays on, and goes off when fully charged.

### Two-way connection method

"1. With the power on, press the power button for 3 seconds to put the headphones in pairing mode, then connect the first smartphone.  
2.Turn off the Wireless function of the first connected smartphone, put the headphones in pairing mode, then connect the second smartphone.  
3.Turn on Wireless on the first smartphone and connect the headphones manually."

### Headphone Line-In Mode

Inserting the audio cable will automatically turn off the headphones.  
Note: When using wired mode, the Wireless mode cannot be started properly. To use the Wireless mode, the audio cable must be unplugged to start properly.

## Earbuds Specifications

Wireless Protocol	SBC/AAC
Transmission Distance	≥10m
Speaker Size	40mm
Frequency Range	20HZ-20kHz
Speaker Sensitivity	118±3dB
Speaker Impedance	32Ω±15%
Microphone Sensitivity	—42dB±3dB
Operating Current	≈7-15ma
Charging Voltage	5V

### What's in the package

1.Wireless headphones	2.Charging cable	3.User manual
4.Audio cable		

## Cautions

\*Avoid placing the headphones in high-temperature environments, including direct sunlight.  
\*Do not place the headphones near open flames or other excessively hot environments.  
\*Keep the headphones dry and avoid exposing them to damp environments or submerging them in liquids.  
\*Only use the provided charging cable to charge the headphones; do not attempt to charge them using other methods.  
\*Do not disassemble the headphones, and refrain from attempting to repair or modify them in any way.  
\*Be cautious of excessive dropping, impact, scratching, or any behavior that may affect the functionality of the headphones. If any damage occurs, such as dents, punctures, tears, deformations, or corrosion, please stop using the headphones immediately and contact the seller or reach out to us through the contact information provided on the warranty card.  
\*If the headphones emit an unusual smell, become excessively hot, or show abnormal changes in color or shape, please stop using them immediately and contact the seller or reach out to us through the contact information provided on the warranty card.

### Warning

Prolonged use of headphones at high volumes may cause hearing damage. Please use them responsibly and at moderate volume levels.

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Product Warranty Card

Product model: \_\_\_\_\_ Product color: \_\_\_\_\_  
Date of purchase: \_\_\_\_\_ Purchase store: \_\_\_\_\_  
Purchase account: \_\_\_\_\_ Warranty reason: \_\_\_\_\_  
User name: \_\_\_\_\_ Contact telephone number: \_\_\_\_\_  
User address: \_\_\_\_\_

**Warranty instructions**  
Please keep the warranty card and valid proof of purchase to present when the product fails to repair, if you cannot provide the warranty card or relevant proof of purchase, the product warranty period will be calculated based on date of delivery of the product.

**Warranty provisions**  
1. Advisory services, users can call 4008894883 for any problems encountered in the warranty process.  
2. Within one year from the date of purchase, if the quality of the product fails and the technical staff of the company confirms that the failure of the machine occurs under normal use, free warranty service will be provided.  
3.The Company shall refuse to provide free warranty service and shall only provide repair service free of labor charges and only charge for parts in the following cases:  
A. The product has been damaged by misuse, negligent use or force majeure;  
B. The product has been dismantled or repaired without the company's authorization.  
C. Crushing, water immersion, shell damage, deformation and other man-made damage.  
D. The original warranty card and the sales certificate of the sales unit cannot be provided, and the date of purchase is beyond the warranty period.  
4. The free service provided by this warranty card does not include accessories, other decorations, gifts, etc.

**Product Qualification Certificate**  
After inspection, the product meets the technical standards and is allowed to leave the factory

