



A/B package Guide Book


- Light-sensitive electron assisted steering wheel
- R/C controls forward/backward and left/right, remote control priority
- Music
- Volume adjustment
- Power display
- Forward and backward
- High and low speed
- Wireless connection
- MP4(Optional)



 **WARNING:** The toy is to be assembled by an adult. In unassembled state contain potentially hazardous sharp points, sharp edges and small part,so please keep out of baby’ s reach

 **Warning:** Not to be used in traffic.

Parts List:(Name and Quantity)

| | | | | | | | | | | | | | |
|---|----------|---------------------|-----------|------------------------|--------------------|----------------|----------------|------------|-----------------|--------------|-----|-------|-------|
|  | | | | | | | | | | | | | |
| Name | A | B | C | D | E | F | G | H | I | J | | | |
| | Car body | Front axle assembly | Rear axle | Motors | Front bumper | Front wheels | Rear wheels | Windshield | Rearview mirror | Front fender | | | |
| Quantity | 1 | 1 | 1 | 2 | 1 | 2 | 2 | 1 | 2 | 2 | | | |
| | K | L | M | N | O | P | Q | R | S | T | U | V | W |
| | Bracket | Lamp holder | Seat | Right/left lamp holder | Little wheel cover | Steering wheel | Remote control | Charger | Big washer | Small washer | Nut | M4*10 | M4*16 |
| | 2 | 1 | 1 | 2 | 4 | 1 | 1 | 1 | 6 | 1 | 4 | 24 | 10 |
| | | | | | | | | | X | | | | |
| | | | | | | | | | | | | | 1 |



 
Product Specifications:

| | |
|------------------|------------------------|
| Name | Specification |
| Battery | 12V or 24V |
| Suitable age | 37-95 months |
| Loading capacity | 35kg |
| Product size | 123*88*80cm |
| Speed | 3-5 km/h |
| Charge/Use time | charge 8-12h, use 1-2h |
| Charger | 12V or 24V |
| Remote control | AAA1.5V |

The above parameters are selected by the customer, and the specific parameters shall be subject to the actual sample.

Function

Picture for reference only, please check your buying.

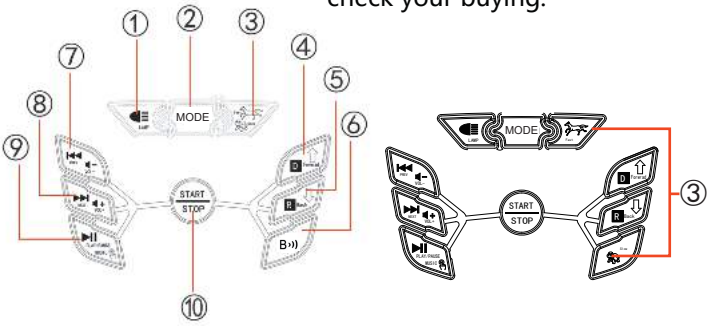


12V Console

24V Console

| | |
|------------------|------------------------|
| Button function | ⑥Wireless connection |
| ① Light | ⑦Music switch/Volume - |
| ② Multifunction | ⑧Music switch/Volume + |
| ③ High/low speed | ⑨Music |
| ④ Forward | ⑩Power |
| ⑤ Backward | |

Remote control function and explanation

 Do not swift forward/backward button when car is driving, or will damage the motor.
Remote control can be used normallywhen battery assembled.
Remote control should be usedunder adults’ supervision.
Remote control is prior to man control.

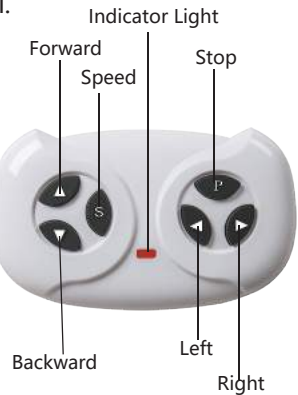

How to adjust R/C frequency:
Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

 
Remote control battery operation

Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity.
New and used batteries can not be used mixed.
Do not insert batteries into wrong polarity, or will be short-circuited.
Non-rechargeable batteries can not be recharged. Exhausted batteries should be replaced by adults.
The exhausted battery must be handled and operated properly by adults only. Do not be played by children.

Installation Order Diagram

1. Installing front axle

First, assemble the front axle as the first picture one step by one step, then turn over it and pass it through the direction lever hole, fix the front axle with 8pcs M4*16 as the second picture. At last, fix the direction lever with washer and cotter pin like the third picture.

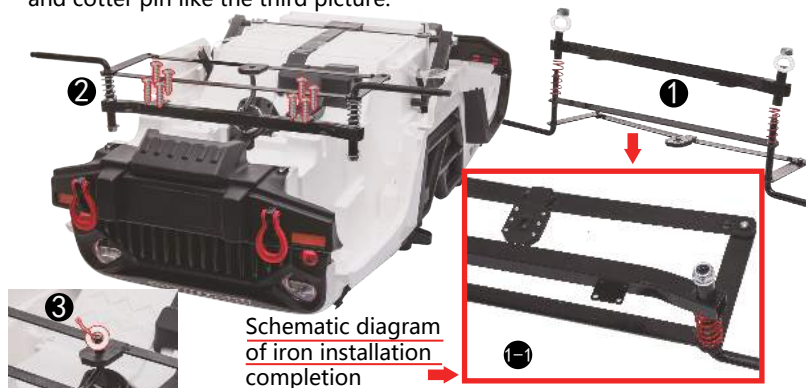

2. Installing rear axle

First turn over the motor fixing device, remove the screw on the shock spring, and then fix it.



3. Installing rear wheel

First distinguish the left and right motors from the front and rear wheels. Put the motor, rear wheel and gasket into the rear axle and fix the cap with screws.



4. Installing front fender and bracket

Distinguish the left and right pedals, align the position of the vehicle body and fix it with screws, distinguish the left and right wheel covers, align the position of the vehicle body and fix it with screws.



5. Installing front wheel

Washer, front wheel and washer are assembled into the front axle, fixed it with screws, then assemble the little wheel cover.



6. Installing steering wheel

Take out the steering wheel screw and fix it in the position on the body.



7. Installing windshield and rearview mirror

Align the windshield and rearview mirror with the body position and firmly clip in.



8. Installing light holder

 
First connect the light line between two lamp holder, then insert light hold into the right/left light holder. finally insert them into the vehicle.



9. Connecting wiring

Connect the motor wiring under the seat

Open the front engine hood and connect the battery wiring.

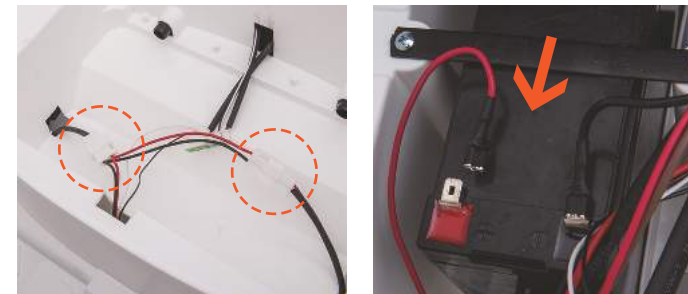

10. Installing seat

Use 2pcs M4x16 screw to tight the seat.



11. Installing front bumper

Insert the front bumper into the right place on the car.



Warnings

For children's safety, please read these carefully.

Assembly and adjustment must be done by adults, keep children away.

Keep children under 36 months away from small parts.

Safe belt is a must when children playing. Do not be closeto fire.

Adult must teach how to play it and never leave children alone for playing.

Do not stand up or play when children are stepping on foot pedal.

Battery must be charged by adults only. Please charge it first before use.

Keep children away from plastic bag, or suffocation may occur.

Only use spare parts which provided by manufacturer.

Charger is not a toy for playing.

Maximum loading capacity is 35KG. Do not overload.

Suitable age: 37-95 months.

Safety use

Do not play in the street, road, slope or ditch.

Do not change the line or add electric device to the car.

Play the car in the dry area, not wet. Keep away from fire, or may damage the line.

One or two riders one time only. Do not overload.

Maximum capacity is 35KG.

Turn power off if no use. If long time no use, unplug battery line.

Check battery, charger and other spare parts regularly.

If any problem, please fix it before playing.

Charging notification

For the first use, please charge 8-12 hours, or will damage the battery.

Plug charger DC line into charge hole first, then plug charger into socket. Car can not be played when it charging.

Every time it charged, do not charge more than 20 hours.

It is normal that charger and battery warm (under 60°) during charging.

Do not charge if plug is wet, or will occur short-circuited.

Only use charger provided by manufacturer, or will damage charger and battery or occur short-circuited.

 
If long time no use, please charge 1 time per month at least.

Charging steps are as follows:

Step 1 : The charging hole is under the steering wheel.

Step2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.

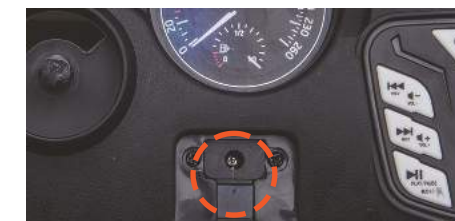

Warning: Car must be charged by adults only. Car is useless during charging

Maintenance and Service

Check battery, charger and other spare parts regularly. If any problem, please fix it before playing.

• Use lubricating oil to care iron parts. Keep car away from fire and sunshine. Park it on the even place, not reversal or gradient.

• Park it indoor and cover it with waterproof cloth.

• Keep car away from fire, like stove or heater, or plastic may melt.

Keep away from flammable things, or may occur fire accident.

• Charge it after use and must be done by adults only. If long time no use, please charge it 1 time per month, in order to maintain battery.

• Clean the vehicle with a dry cloth only. Do not use chemical solvent to wipe plastic parts. Do not wash it with water or play it when raining or snowing. Water will damage motor, electric system or battery.

• Please turn power off after each use.

• Only use charger provided by manufacturer.

• Do not change car's structure or electric line. Check job request some skills or under specialist's guidance.